


ASSEMBLY INSTRUCTIONS FOR YOUR  
**Jonathan Adler**  
CANNAN ACCENT LAMP

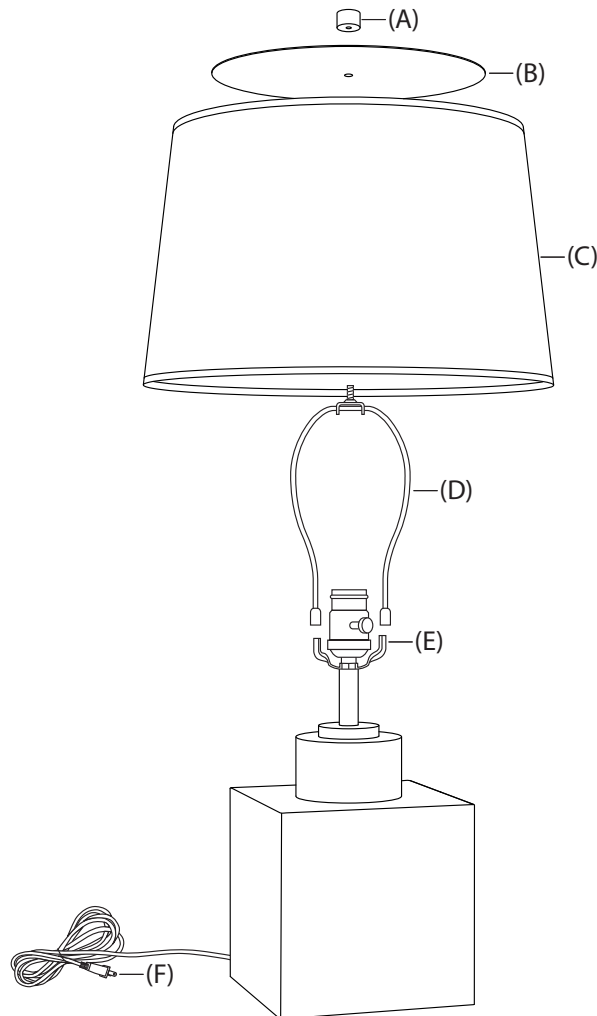

**IMPORTANT SAFETY INSTRUCTIONS:**

- \* This lamp has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If it does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do NOT alter the plug.
- \* Do not use with an extension cord unless the plug from the lamp can be fully inserted into the extension cord receptical.
- \* Switch power off and remove plug from the wall outlet before replacing the bulb.
- \* Do not connect electricity until lamp is fully assembled.

**ASSEMBLY INSTRUCTIONS:**

NOTE: Be sure to locate diffuser (B) before discarding packing materials.

1. Unpack all parts and remove packing materials. Place lamp base on level surface.
2. Remove finial (A) from harp (D). Squeeze harp (D) inward and place into the opening of saddle (E).
3. Place shade (C) onto harp (D). Place diffuser (B) onto the top of shade (C). Thread finial (A) back onto the harp to secure the shade to the lamp.
4. Install one 100W max. Type A, medium base bulb into the socket.
5. Remove protective plastic from plug (F).
6. Insert plug (F) into wall outlet.

\*\* To clean, use a soft cloth only. Do not use any chemical or abrasive cleaners. \*\*