

ASSEMBLY INSTRUCTIONS FOR YOUR


Jonathan Adler

PARKER TABLE LAMP

ASSEMBLY INSTRUCTIONS:

*** Do not connect electricity until lamp is fully assembled. ***

1. Unpack all parts, do not discard any parts.
2. Place base (G) on level surface.
3. Carefully lower glass shade (B) over housing (H). Glass shade (B) will sit inside recess on base (G). Align holes in glass shade (B) with shade support arms (E).
4. Insert shade support arms (D) through holes in glass shade (B). Thread shade support arms (D) into threaded opening of support arm (E)
5. Remove decorative nuts (C) from shade support arms (D) and set aside. Caution, make sure not to unthread shade support arms (D) when removing decorative nuts (C).
6. Carefully place metal shade (A) over glass shade (B). Align holes in metal shade (A) with shade support arms (D). Thread decorative nuts (C) into ends of shade support arms (D) to secure metal shade (A) to the lamp.
7. Insert one (1) Type A, 60 watt bulbs into socket (F).
8. Remove plug cover (J) from polarized plug (I). Insert polarized plug (I) into wall outlet.

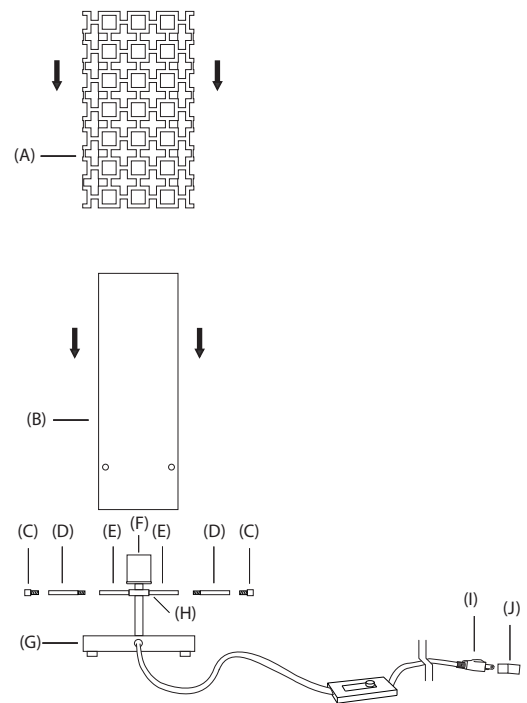

Caution: To clean, use a soft cloth only. Do not use any chemical or abrasive cleaners.

Note: Turn the power off (unplug from the wall outlet) before replacing the bulb, making sure the bulb has had sufficient time to cool down. Do not subject the lamp to any shock while lit as shattering of bulb may result.

IMPORTANT SAFETY INSTRUCTIONS

This portable lamp has a polarized plug (one blade is wider than the other) as a feature to reduce risk of electric shock, plug will fit in a polarized outlet only one way. If it does not fit fully in outlet, reverse plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted.

DO NOT ALTER THE PLUG.