

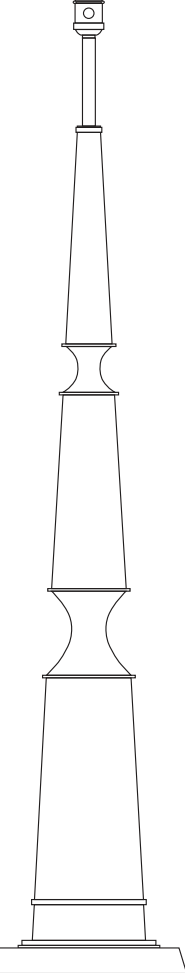



ASSEMBLY INSTRUCTIONS FOR YOUR  
**Jonathan Adler**  
VERSAILLES FLOOR LAMP

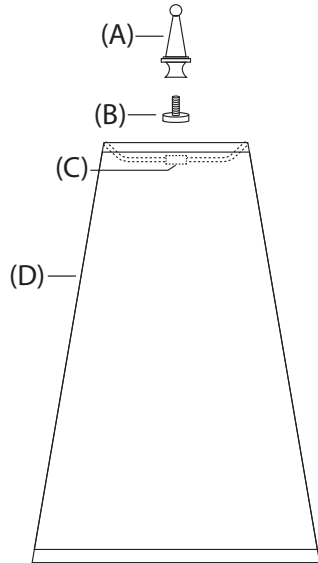

**IMPORTANT SAFETY INSTRUCTIONS:**

- \* This lamp has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If it does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do NOT alter the plug.
- \* Do not use with an extension cord unless the plug from the lamp can be fully inserted into the extension cord receptacle.
- \* Switch power off and remove plug from the wall outlet before replacing the bulb.
- \* This lamp has been UL rated for dry locations.

**ASSEMBLY INSTRUCTIONS:**

NOTE: Do not connect electricity until lamp is fully assembled.

1. Unpack all parts and remove packing materials. Place lamp base on level surface.
2. Remove threaded base (B) from finial (A). Insert threaded base (B) through the bottom of shade washer (C). Thread finial (A) back onto threaded base until hand tight, securing it to shade (D).
3. Remove flange (E) from socket (F).
4. Place shade (D) onto socket (F). Thread flange (E) back onto the socket to secure the shade to the lamp.
5. Install one 100W max. Type A, medium base bulb into the socket (F).
6. Insert plug (G) into wall outlet.

\*\*To clean, use a soft cloth only. Do not use any chemical or abrasive cleaners. \*\*