

# IN20040WH INSTALLATION INSTRUCTIONS

1500 Cherokee Parkway, Suite 100, Acworth, GA 30102  
Phone: (866) 845-5451. Fax: (866) 816-6165  
www.acclaim-lighting.com

**ACCLAIM**  
LIGHTING  
INTERIOR • OUTDOOR

Please read carefully and save these instructions as you may need them a later date.

## CAUTION

Turn off the main power at the circuit breaker before installing the fixture in order to prevent possible shock.


## GENERAL

All electrical connections must be in accordance with local and National Electrical Code (N.E.C) standards. If you are unfamiliar with proper electrical wiring connections obtain the services of a qualified electrician.

Remove the fixture and the mounting package from the box and make sure that no parts are missing by referencing the illustration.

## ASSEMBLY AND INSTALLATION (pendant)

1. Thread one 3" Rod to the coupling of the fixture body, and then thread one 3" Rod, one 6" rod, three 12" rods, and join together with couplings.
2. Place the Metal washer and Spring washer to the Joint, and then fasten them with butterfly nut.
3. Thread the Support screws to the cross bar and secure with the Hex nut.
4. Secure the Cross bar to the outlet box with the Mounting screws.
5. Pull out the outlet wire and ground wire from the Outlet Box.
6. Make wire connections:
  - The ridged wire (unmarked) from the fixture to white wire from power source.
  - The smooth wire (marked) from the fixture to black wire from power source.
  - Loop the ground wire to cross bar with a green screw.
7. Align the canopy against the outlet box, secure the canopy with the ball nuts
8. Install bulbs: (Bulbs not included)  
(Don't exceed the maximum capacity recommended on the Sockets).  
**INSTALLATION IS NOW COMPLETED.**

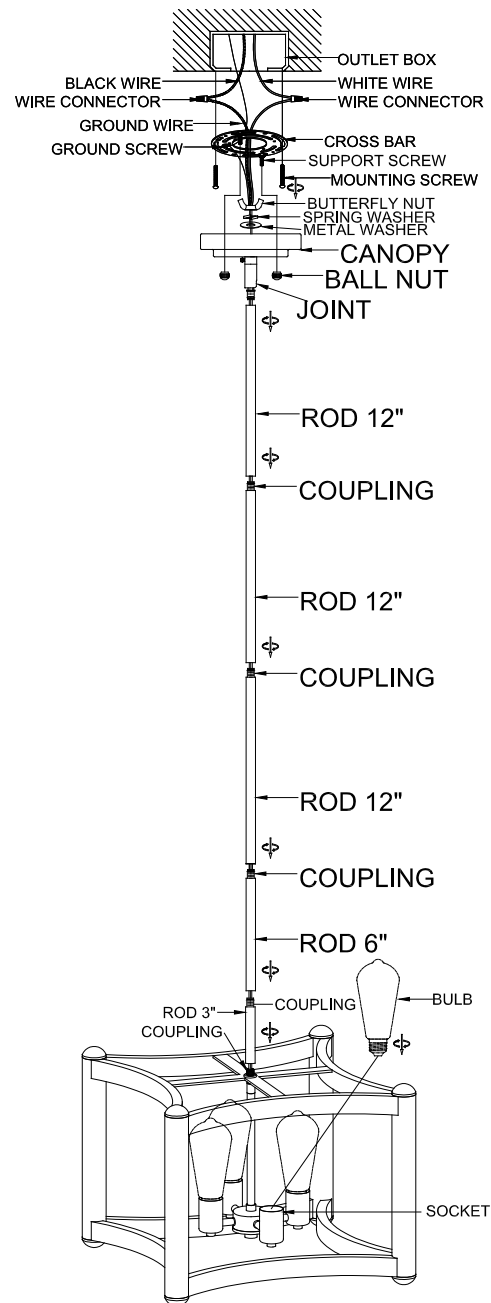

# IN20040WH INSTALLATION INSTRUCTIONS

1500 Cherokee Parkway, Suite 100, Acworth, GA 30102  
Phone: (866) 845-5451. Fax: (866) 816-6165  
www.acclaim-lighting.com

**ACCLAIM**  
LIGHTING  
INTERIOR • OUTDOOR

Please read carefully and save these instructions as you may need them a later date.

## CAUTION

Turn off the main power at the circuit breaker before installing the fixture in order to prevent possible shock.

## GENERAL

All electrical connections must be in accordance with local and National Electrical Code (N.E.C) standards. If you are unfamiliar with proper electrical wiring connections obtain the services of a qualified electrician.

Remove the fixture and the mounting package from the box and make sure that no parts are missing by referencing the illustration.

## ASSEMBLY AND INSTALLATION (semi-flush)

1. Remove the Butterfly Nut, Spring washer, Metal washer and Joint from the Canopy, feed the fixture wire through the Canopy and thread one 2" Rod to the coupling at the top of the fixture body.
  2. Place the Metal washer and Spring washer to the 2" rod, and then fasten them with Butterfly Nut.
  3. Thread the Support screws to the cross bar and secure with the hex nut.
  4. Secure the cross bar to the outlet box with the mounting screws.
  5. Pull out the outlet wire and ground wire from the outlet Box.
  6. Make wire connections:
    - The ridged wire (unmarked) from the fixture to white wire from power source.
    - The smooth wire (marked) from the fixture to black wire from power source.
    - Loop the ground wire to cross bar with a green screw.
  7. Align the Canopy against the outlet box, secure the Canopy with the Ball Nuts
  8. Install bulbs: (Bulbs not included)  
(Don't exceed the maximum capacity recommended on the Sockets).
- INSTALLATION IS NOW COMPLETED.

